

MPXone

1. Install Carel Applica


Download and install the [Carel Applica](#)

2. Connect To Your Controller

- Open the app and connect to your Carel controller using **Bluetooth** or **NFC** (depending on model).
- You may need to select the account/profile **Service**
- When prompted for a password input **22**


3. Access the Parameters

- Open the main menu.
- Navigate to the **Parameters** section.

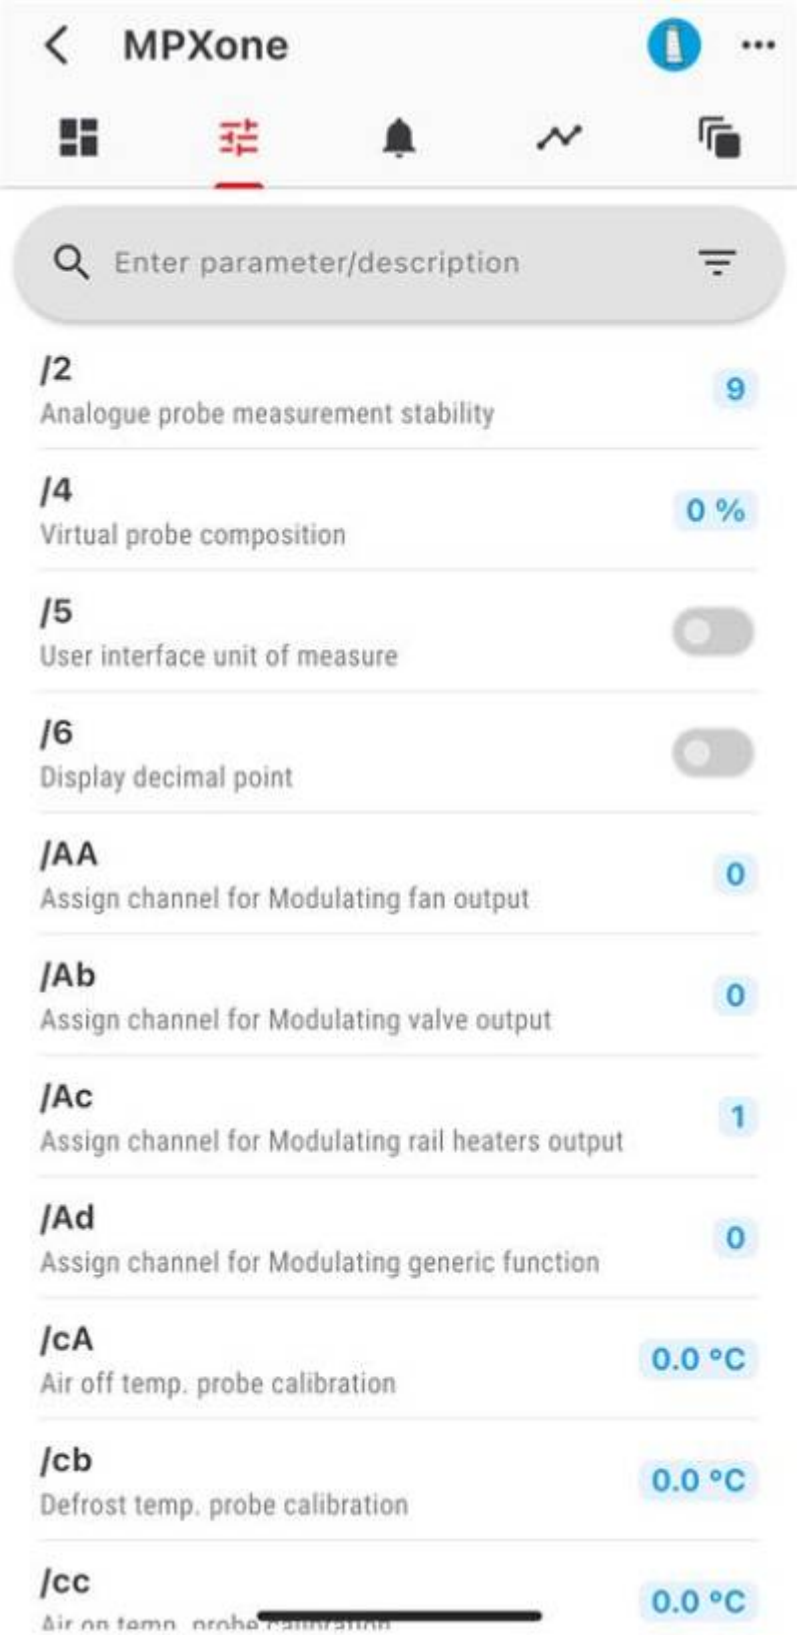


4. Selecting Communication Settings

On the search bar tap the filter icon and then select **Communication**

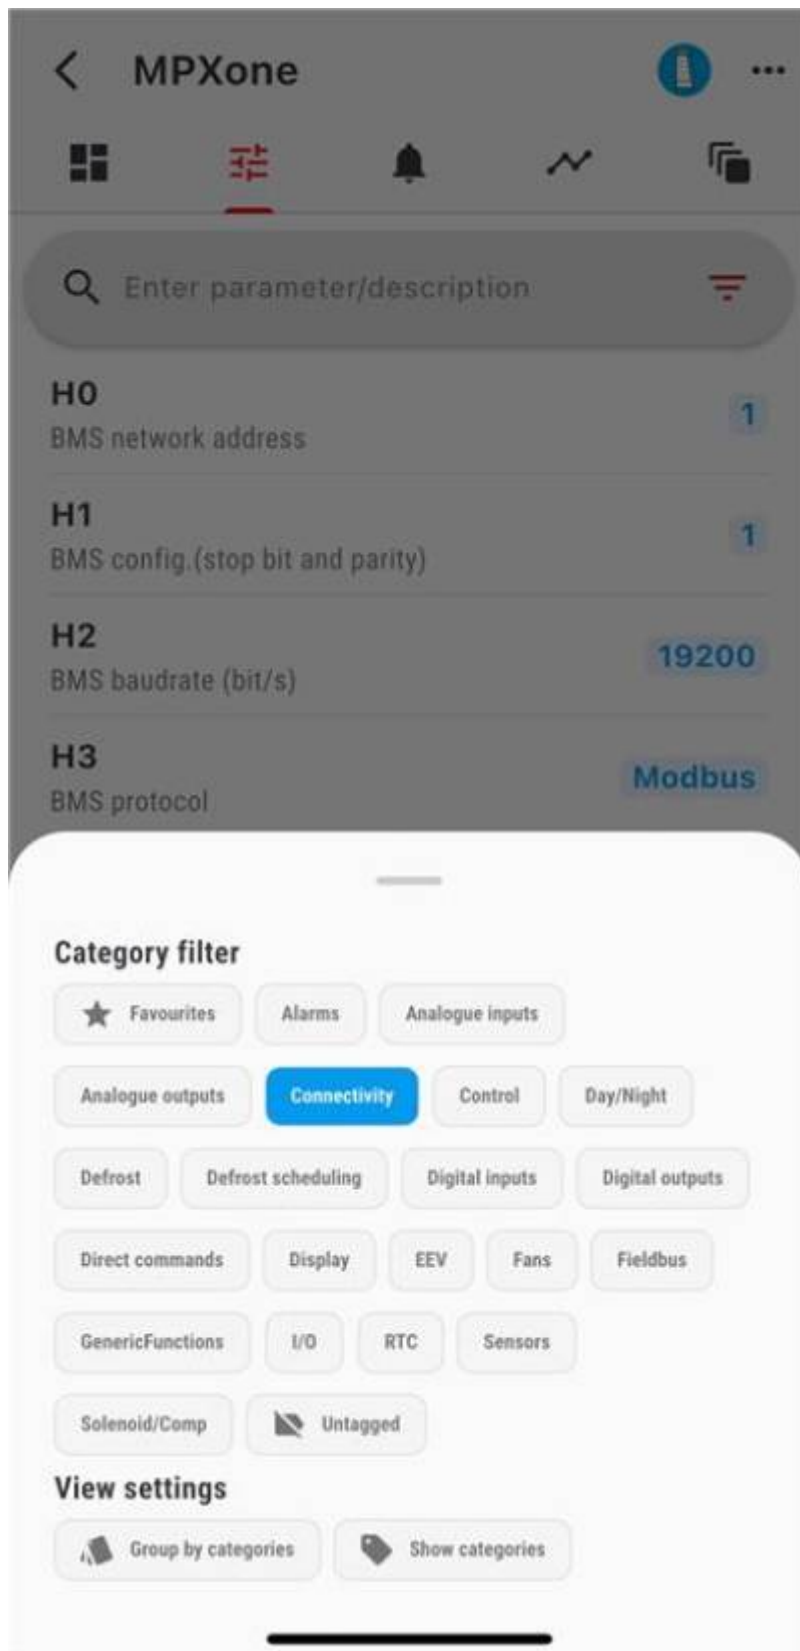


5. Set Communication Parameters


- H0 BMS Network Address: 1

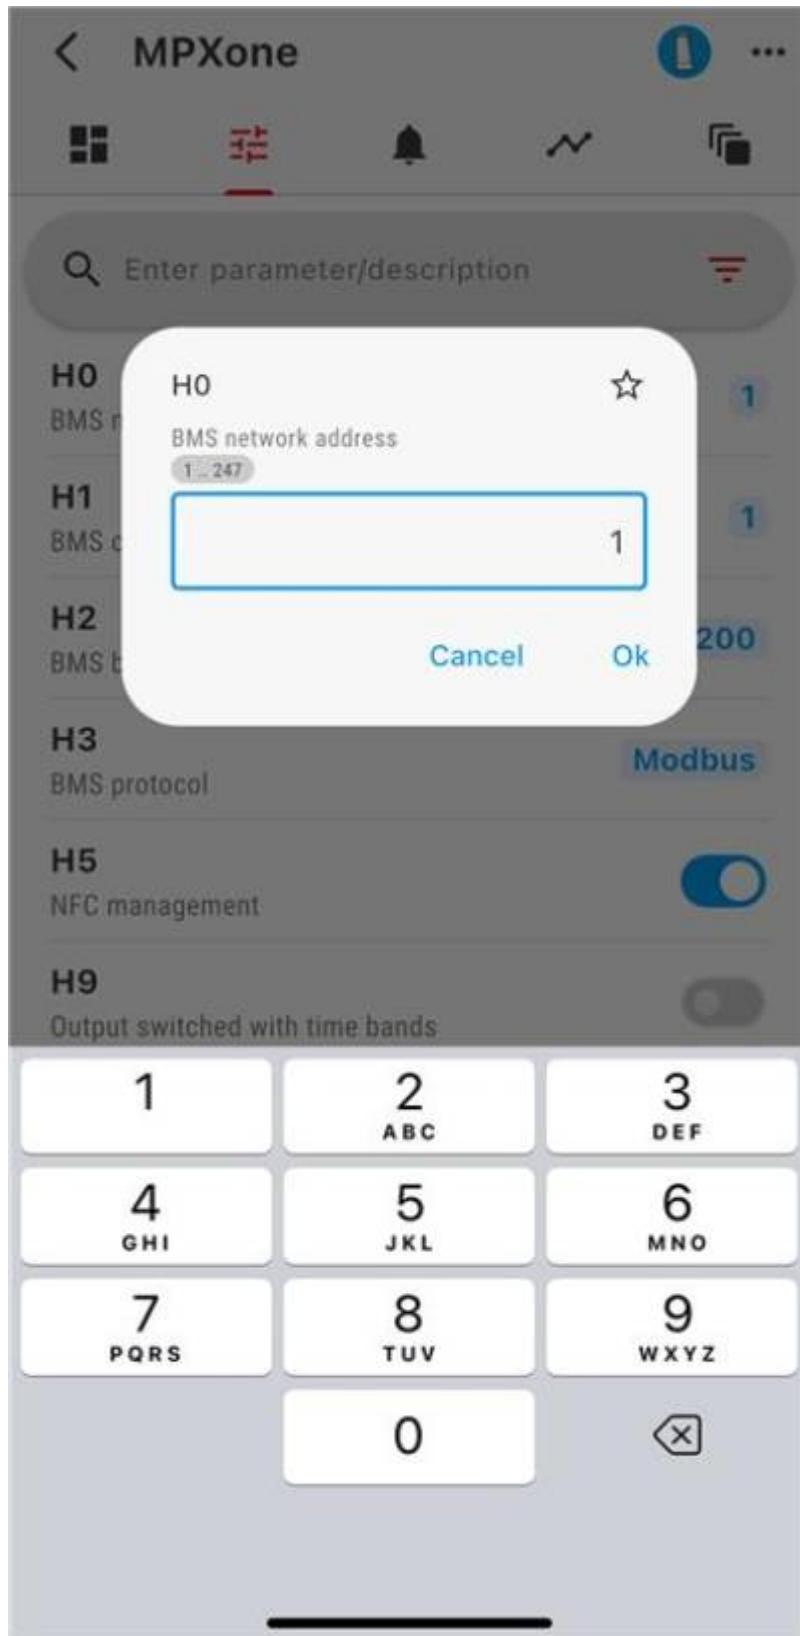


- H1 BMS config.(stop bit and parity): Stop bit 2 parity none

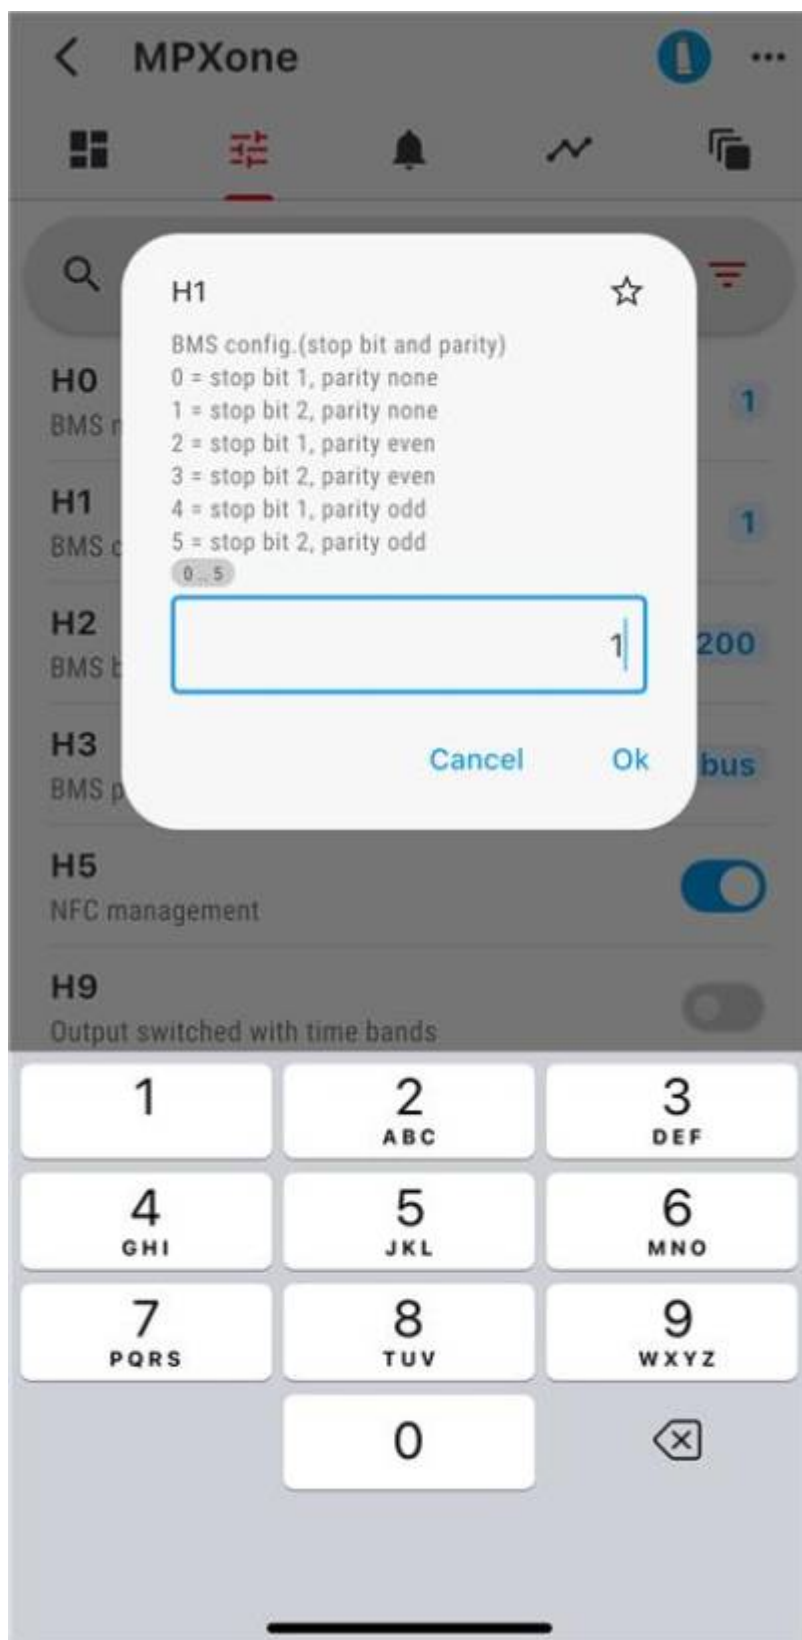

- H2 BMS baudrate (bit/s): 19200

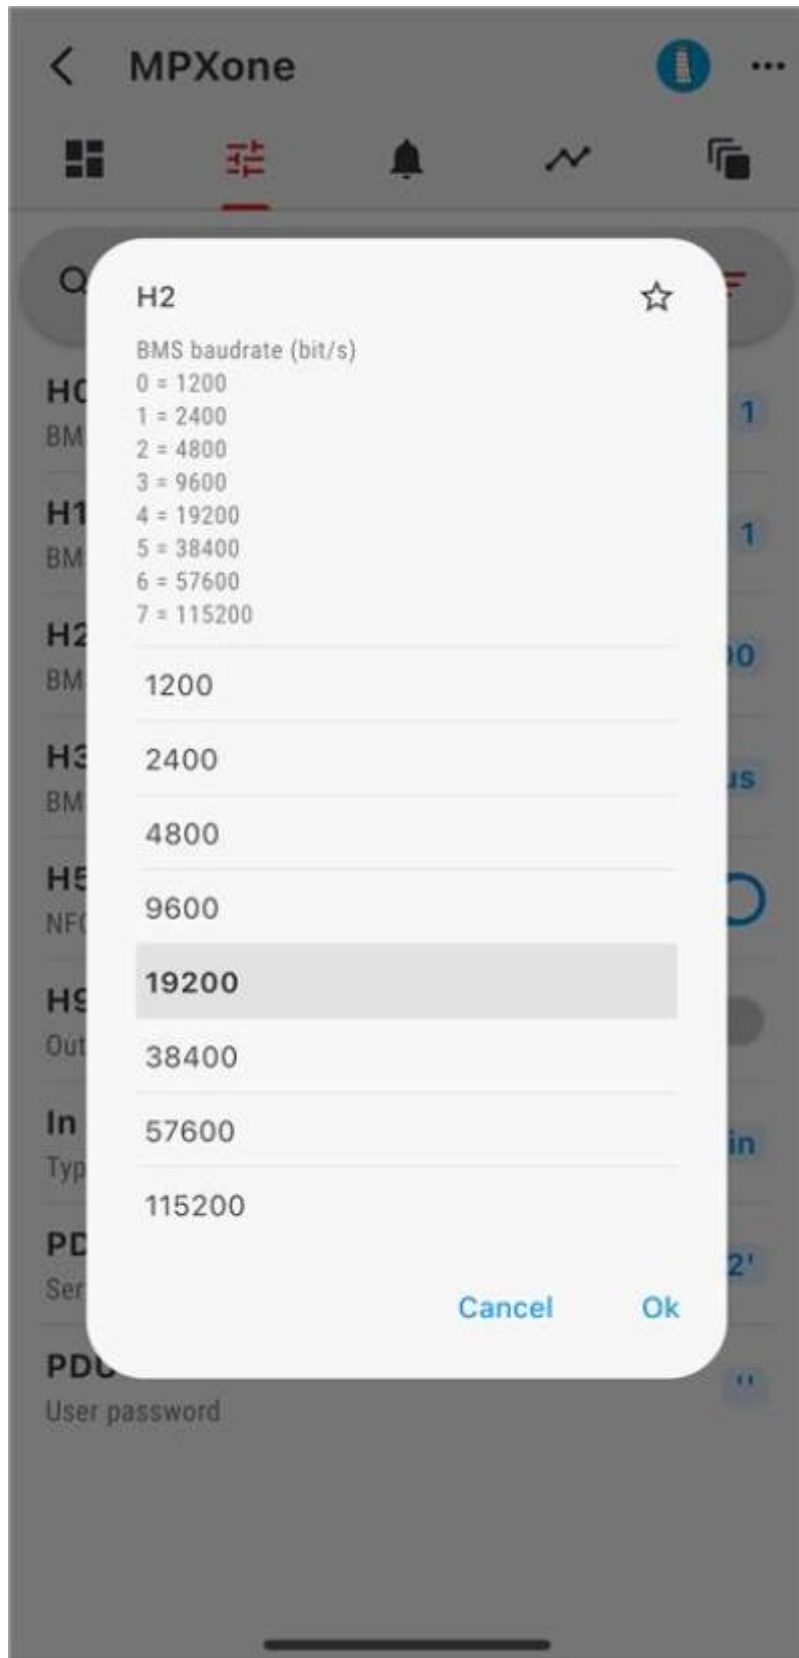

- H3 BMS protocol: Modbus

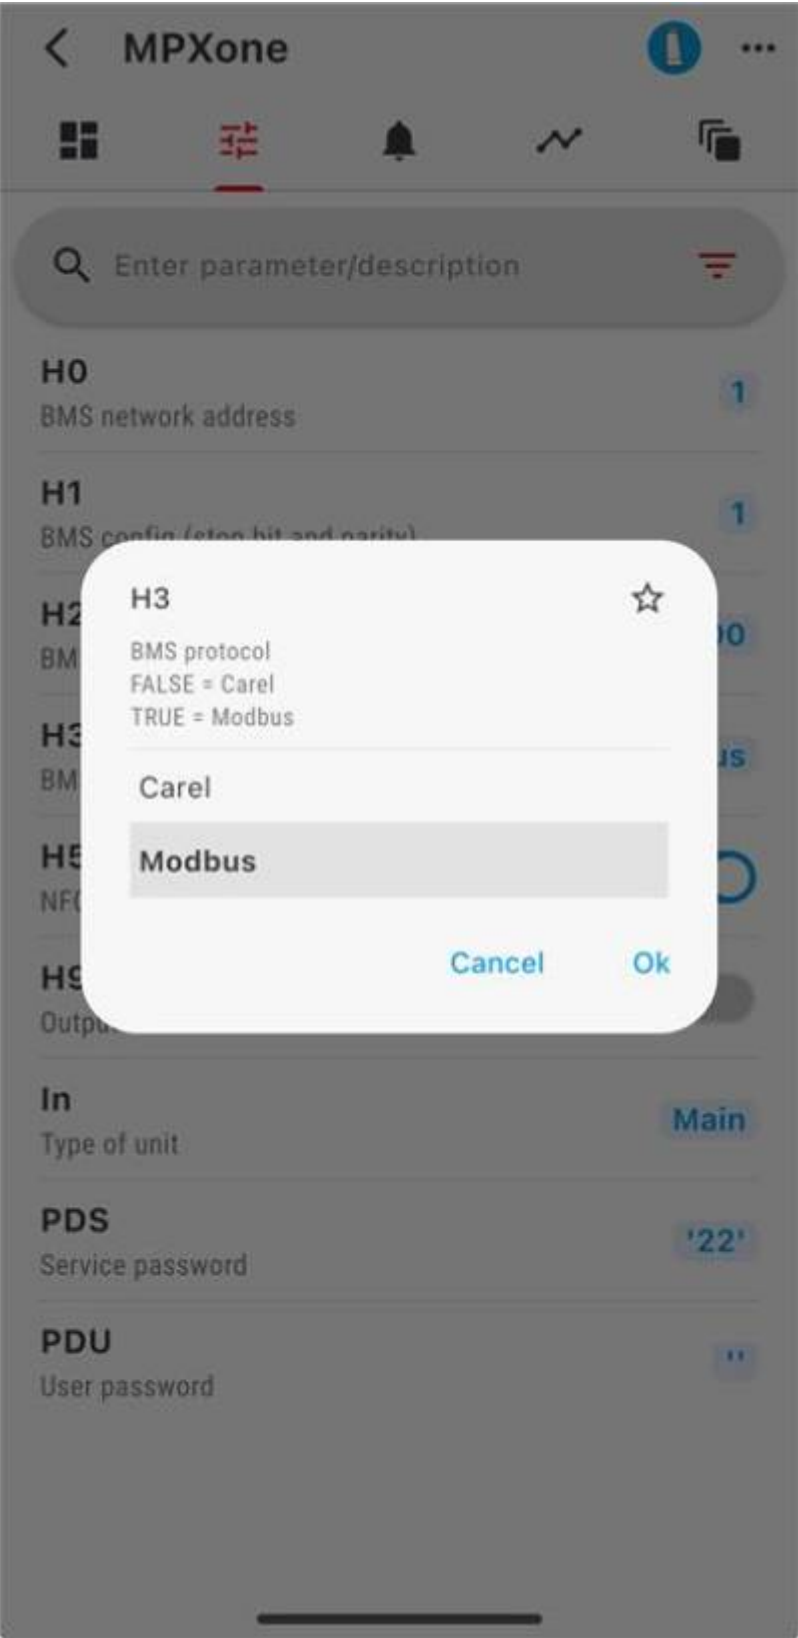

From:
<https://docs.myfridgeonline.com/> - **MyFridgeOnline**

Permanent link:
https://docs.myfridgeonline.com/products/smrtcold/smrt_cold_mk2/mpx_one

Last update: **2025/08/26 07:32**



